

## **GSC – 1 Door/ 3 Window Alarm Kit**



Alarm sounds when window or door is opened

- Easy to Install - No Wiring Necessary
- Door Alarm Uses 4-Digit Keypad to Set Security Code for Arming/Disarming
- Door Alarm Delay Feature to Avoid False Triggering
- 3-Window Alarms Included
- All Alarms are 120 Decibel
- Door Alarm Requires 3 AAA Batteries (Not Included)
- Each Window Alarm Requires 4 LR44 Batteries (Included)

**[info@agministries.net](mailto:info@agministries.net)**